

**STRIKE GUARD® LIGHTNING WARNING SYSTEM
WITH WAVE SIREN® STATION AND WAVE SEQUENCER**



3924 NORTH CALLE CASITA • TUCSON, AZ 85718 USA
 TEL: 520.615.9999 • FAX: 520.615.0030
 TOLL FREE: 800.615.0340 • www.wxline.com

Refer to WAVE Sequencer
Wiring Diagrams to install relays.

To relays

Strike View Software

AC
surge
arrester

**Strike Guard RS232 to
Fiber-optic Converter**




[Outdoor Installations]
[Indoor Installations]

Fiber In
(Black Connector, RX)

9-pin Serial Port

Bond Wire

Interface Cables
to Transmitter and
to Sequencer.

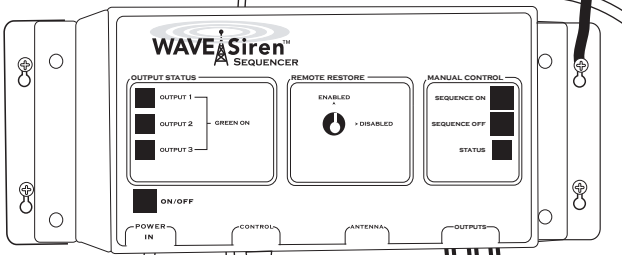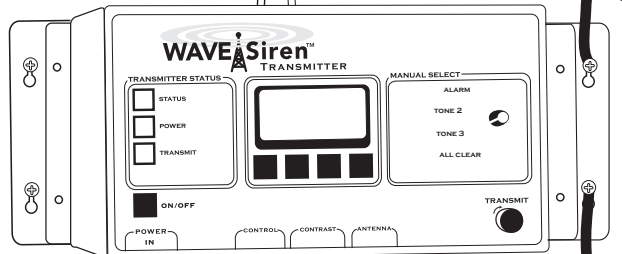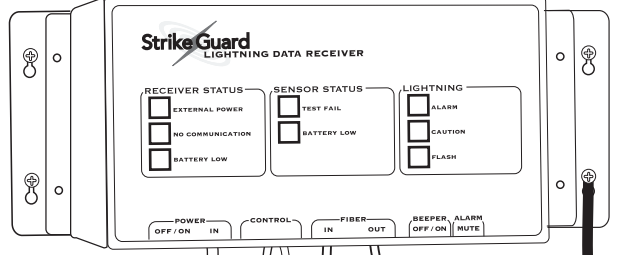

**Strike Guard Lightning
Data Receiver**

WAVE Transmitter

**WAVE Sequencer
Direct Connect**

WAVE Sequencer

Strike Guard Sensor

20 ft. minimum

Transmitter Monopole Antenna

Antenna Cable

Fiber-optic Cable

Fiber-optic Cable

Electronics Box

Mounting Plate

Horn

Strobe Light

Solar Panel
(as shown) or AC
power source.