



WAVE Siren Station

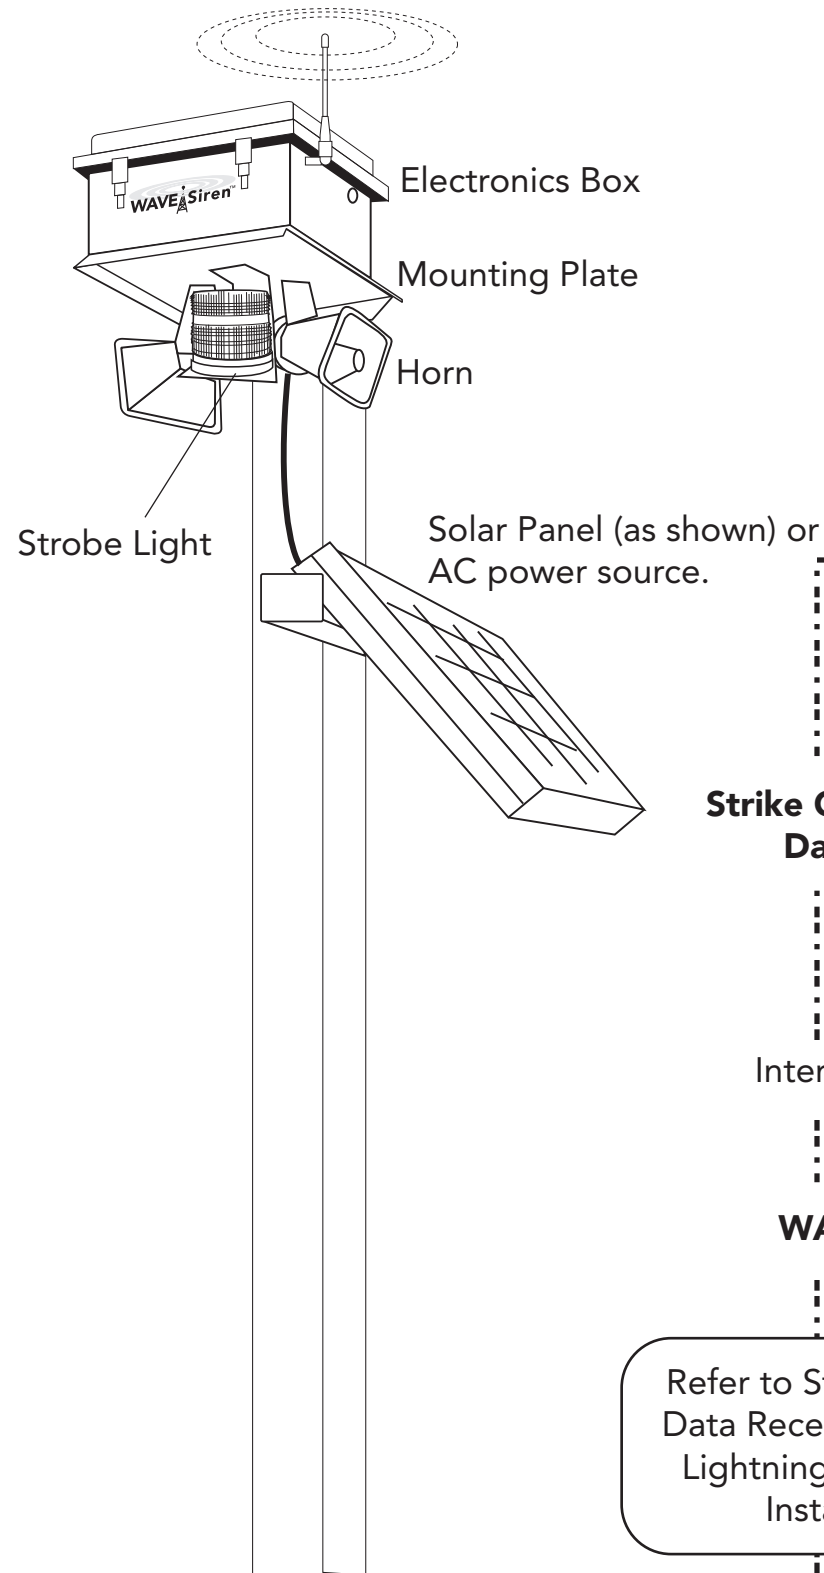


Strike Guard Sensor

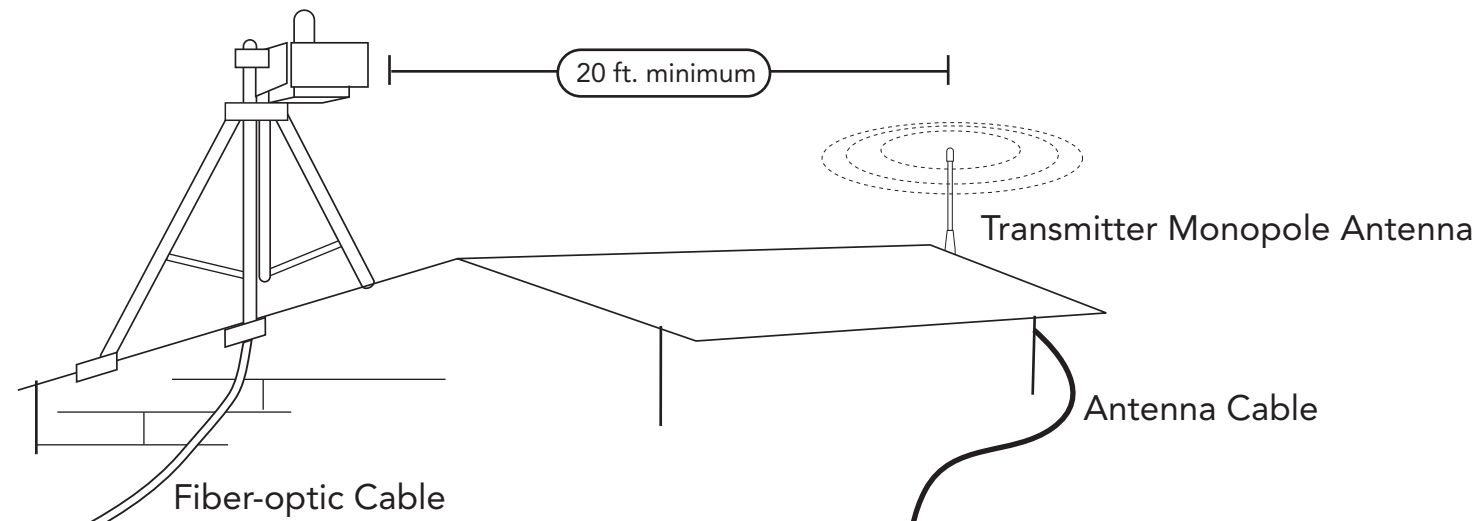

[Outdoor Installations]


[Indoor Installations]

Strike Guard Lightning Data Receiver

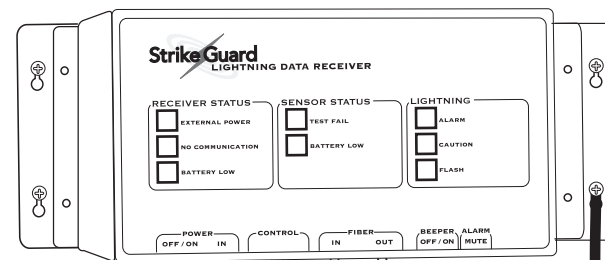

Interface Cable

WAVE Transmitter

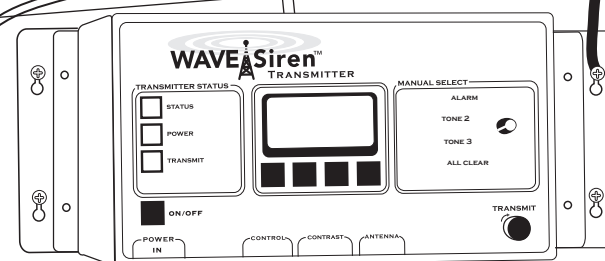

Refer to Strike Guard® Lightning Data Receiver/WAVE Transmitter Lightning Protection Bulkhead Installation diagram.

Bond Wire



Fiber-optic Cable

Fiber In (Black Connector, RX)

Strike Guard RS232 to Fiber-optic Converter



Refer to Strike View Server and Strike View Client on a Local Area Network diagram for network applications.

STRIKE GUARD® LIGHTNING WARNING SYSTEM WITH WAVE SIREN® STATION



3924 NORTH CALLE CASITA • TUCSON, AZ 85718 USA
TEL: 520.615.9999 • FAX: 520.615.0030
TOLL FREE: 800.615.0340 • www.wxline.com