



**Status LED**— Green when system is functioning normally. Red indicates a system fault. Scroll through LCD menu to view errors

**Multi Purpose Display**  
No backlight when running on battery power

**Power LED**— Green when AC power is present and Red when operating on battery power

**Brass Thumbscrew**

**Transmit LED**— illuminates Red with radio transmission

**Quick Select Knob**— selects sound at Siren Station

**Transmit Key**— momentary quarter turn of key transmits radio message to Siren Stations.

**On/Off Switch**— to turn Transmitter off hold button for 5 seconds

**Power Supply Connector**

**Control Input**— Strike Guard, ESID, or other device

**Contrast Adjustment**— selects LCD screen viewing angle

**Antenna Connector**

**Menu Soft Keys** control navigation through settings and commands. Time settings, operating hours, manual Sequencer and Strobe commands, test messages, and other functions are controlled via these four soft keys.

**WAVE TRANSMITTER NOMENCLATURE**



3924 NORTH CALLE CASITA • TUCSON, AZ 85718 USA  
TEL: 520.615.9999 • FAX: 520.615.0030  
TOLL FREE: 800.615.0340 • www.wxline.com